


Koolance RMA Reservoir Adapter Installation


This instruction sheet explains how to install the Reservoir Adapter. This component allows all PC2-C, or PC2-601 and PC2-901 systems manufactured before March 2003, to integrate a newer style (Exos) reservoir.

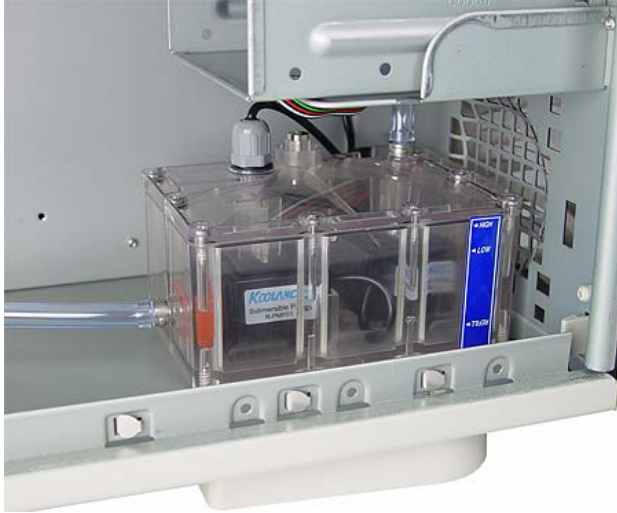

Older Style Reservoir



Newer Style (Exos) Reservoir

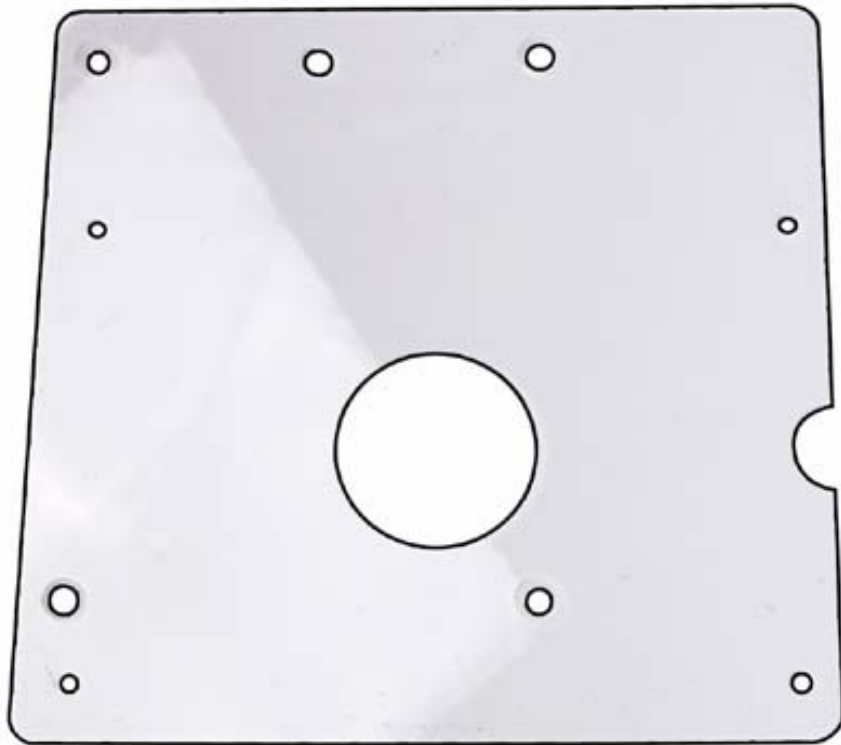


EXOS Tank Adapter




Accessories (4 Silver Screws, 3 Long Gold Screws, 1 Short Gold Screw, 4 Rubber Spacers)




Place the Adapter over the bottom of the reservoir, and insert 4 silver screws as illustrated above. (bottom view)

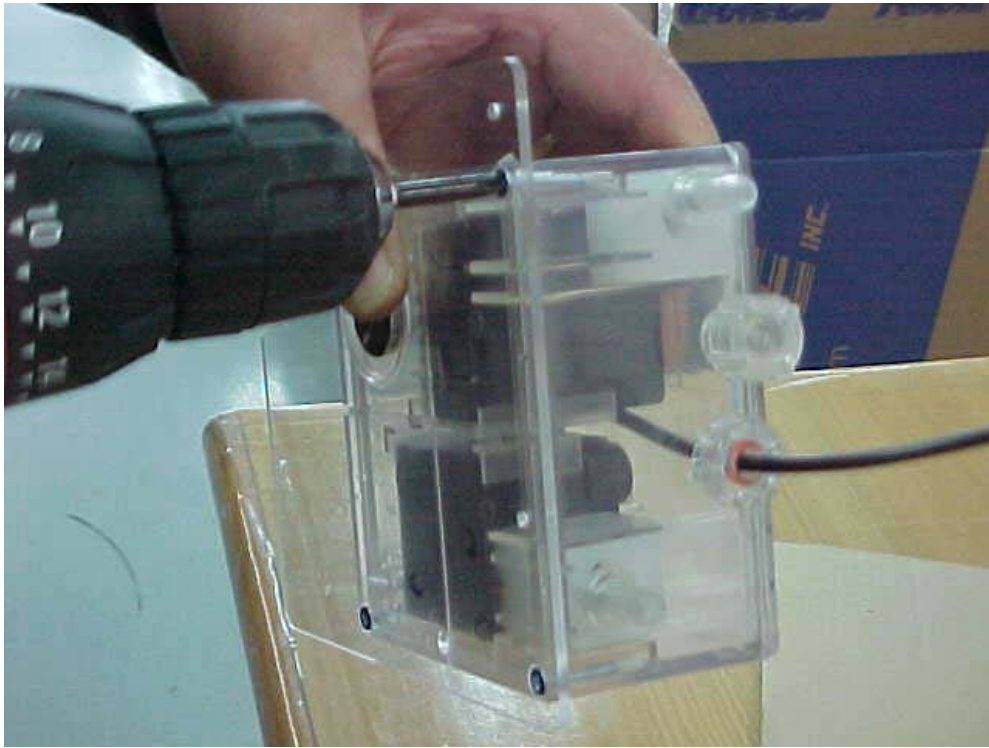

Tighten all 4 silver screws at each corner of the reservoir with the adapter attached.

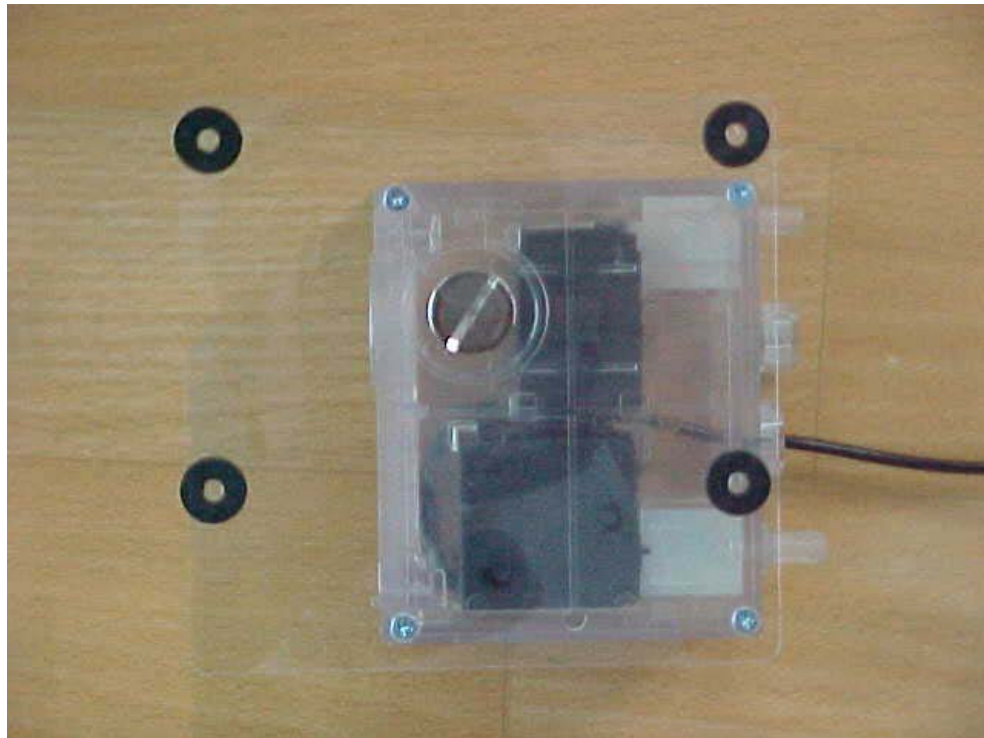

Place 4 rubber spacers at each corner. (Bottom View)

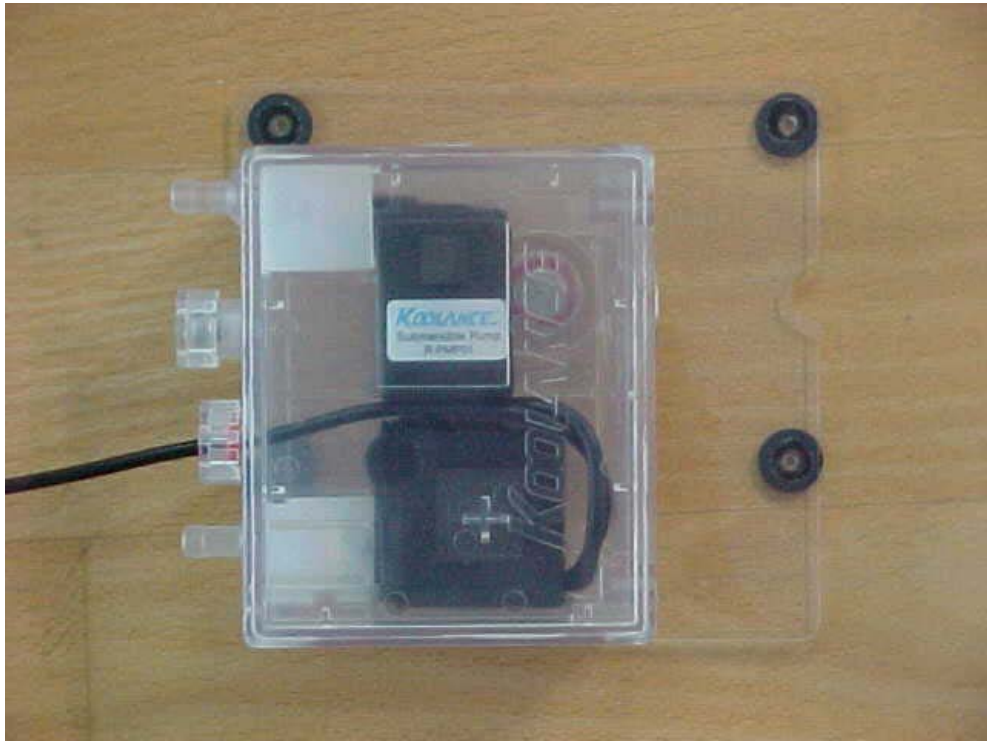

EXOS tank with adapter attached correctly. (Top View)



Place the new reservoir at the bottom of a PC2-C, PC2-601, or PC2-901 Case with 3 long gold screws and 1 short gold screw. (**NOTE:** The short gold screw must be placed in hole #1 as shown in the next image.)



Add the remaining 3 gold screws in positions 2, 3, and 4. Tighten all screws.



Correct installation should appear as above. (Outside View)



Correct installation should appear as above. (Inside View)